

Neo v1.1 - Quick Install Guide - Next Level

	Programming Procedure		Action	Page Number	
1	Set Time & Date	* 6 1234 01	Set Military Time & Date	Page 6	
2	Enroll Wireless Devices	*8 5555 804 *	Press and Hold Enroll Button	Page 15	
	<div style="border: 1px solid black; padding: 5px;"> <p>Common zone types (more can be found on page 15 of the installation book)</p> <p>001 Delay 1 (Entry/Exit Doors)</p> <p>002 Delay 2 (Extended Delay)</p> <p>003 Instant (Perimeter)</p> <p>004 Interior (Glassbreak)</p> <p>005 Interior, (Stay/Away, M/D)</p> <p>008 24-Hour Fire</p> <p>041 24-Hour CO</p> <p>043 24-Hour Panic</p> <p>045 24-Hour Heat</p> <p>046 24-Hour Medical</p> <p>047 24-Hour Emergency</p> <p>049 24-Hour Flood</p> <p>052 24-Hour Non-Alarm</p> </div>		FOBs & Panic Buttons - Press button		
				PIRS, Smoke, & Glass Break - Enroll	
				Door/Window - Enroll	
				Keypad - Press * & 1 together	
				A) Confirm 7-Digit Serial Number	
				B) Confirm Zone Number/Key Number	
				C) Confirm 3-Digit Zone Type	
				D) Press # (to accept Partition 1) or * for keypad assignment	
				E) Press # to ignore label (can be done later)	
3	Zone Definitions	[001][001 - 128]	001 (Zones 001-128)	Page 11	
	<div style="border: 1px solid black; padding: 5px;"> <p>Common zone types (more can be found on page 15 of the installation book)</p> <p>001 Delay 1 (Entry/Exit Doors)</p> <p>002 Delay 2 (Extended Delay)</p> <p>003 Instant (Perimeter)</p> <p>004 Interior (Glassbreak)</p> <p>005 Interior, (Stay/Away, M/D)</p> <p>008 24-Hour Fire</p> <p>041 24-Hour CO</p> <p>043 24-Hour Panic</p> <p>045 24-Hour Heat</p> <p>046 24-Hour Medical</p> <p>047 24-Hour Emergency</p> <p>049 24-Hour Flood</p> <p>052 24-Hour Non-Alarm</p> </div>		SAMPLE Zone List (below for 1st 8-Zones)		
				001 (Front Door)	
				001 (Garage Entry Door)	
				003 (Back Door)	
				003 (Sun Room Window)	
				005 (Family Room Motion)	
				004 (Family Room Glass Break)	
				002 (Garage Overhead Door)	
				008 (4-Wire Smoke Loop)	
				*NOTE -- will auto-advance to next zone regardless of starting zone	
4	Change Default Installer Code	[006] [001]	Enter new 4-digit Installer code, 6398	Page 11	
5	Use Normally Closed Loops	[013]	Press 1 ON (verify "Y" in lower right)	Page 12	
	Enable Temporal 3 Fire Signal		Press 8 ON		
6	Enable Police Panic Key Audible	[015]	Press 2 ON	Page 12	
	Enable Quick Exit (resi)		Press 3 ON		
	Disable Quick Arm (comm)		Press 4 OFF (verify "N" in lower right)		
	Turn TLM off (no phone monitor)		Press 7 OFF		
7	Enable Daylight Savings Time	[017]	Press 6 ON	Page 12	
8	Keypad Buzzer follows Siren	[018]	Press 5 ON	Page 12	
9	Enable Additional Partitions	[200] [001]	Press 2 ON for Partition 2	Page 13	
10	Zone Assignments (per Partition)	[201 - 208]	Partition 1 (section [201] [001-106])	Page 13	
			001 (Zones 1-8)		
			002 (Zones 9-16)		
			003 (Zones 17-24)		
			004 (Zones 25-32)		
			005 (Zones 33-40)		
			006 (Zones 41-48)		
			continue 007 to 016 for up to 128 Zones		
11	(3G2080 - Cell Radio) No land Line	[300] [001-004]	Enter " 02 " for Automatic Routing	Page 13	
	(NO GSM) C.S. Phone Number	[301] [001-004]	Leave " D " then enter phone number		
12	System Account Number	[310] [000]	Enter 4-Digits	Page 14	

Page 2						
13	Partition 1 Account Number	[310] [001]	Enter 4-Digit Account Code (again)	Page 14		
14	Communicator Format Options	[350] [001-004]	Enter 03 (for Contact ID)	Page 14		
15	Test Transmission Time of Day	[377] [004]	Enter 4-Digit Time (in 24-hr format)	Page 14		
16	Turn Alternate Communicator On	[382]	Press 5 ON	Page 14		
17	DLS Remote Programming	[401]	Press 1 ON	Page 47		
18	Wireless ESN review	[804] [990]	Sub-sub Section [001] to [005]	see HSM2HOST9		
19	Programming Zone Labels	[000] [001]	Key in zone numbers = 001 - 128	Page 11		
<div style="border: 1px solid black; padding: 5px;"> [<] = Display Left (Previous) [>] = Display Right (Next) [1] = A B C 1 [7] = S T U 7 [2] = D E F 2 [8] = V W X 8 [3] = G H I 3 [9] = Y Z 9 0 [4] = J K L 4 [0] = SPACE [5] = M N O 5 [*] = SELECT [6] = P Q R 6 [#] = ESCAPE </div>		<-- Custom Label Table NOTE: USE LANGUAGE LIBRARY FOUND IN KEYPAD MANUAL		see HS2LCD		
20	Adding Codes or Changing Master					
	New Master	*5 1234 01	* then Enter New Master			
	Codes	*5 1234 02-95	* then Enter New Code			
Use > for Names (or optional tags) can be added for each user along with Options and Partition assignment						
21	Wireless Placement Test	[904] [001-128]	Select wireless device to be tested, two results:			
	[521-528]	repeaters	24-Hour: Average results received over 24-hr period			
	[551-566]	sirens	Now: Signal status results of the current test			
	[601-632]	fobs	** See 5-5 in Reference Manual for more info **			
	[701-716]	keypads				
Optional Changes (see below)						
	Extend Entry/Exit Delay Times	[005] [001-008]	Enter: 045 120 090	Page 11		
	Enable Keypad Tamper	[016]	Press 8 ON	Page 12		
	Enable Chime on Close	[017]	Press 2 ON			
	Change Temp to Fahrenheit	[019]	Press 7 OFF			
	*8 Accessible while Armed	[020]	Press 3 ON			
	Disable Trouble Beeps	[022]	Press 7 ON			
	Code required for Bypassing	[023]	Press 4 ON			
	Disable Delinquency Reporting	[308] [311]	Press 6 OFF	Page 13		
	Disable Event Buffer Reporting	[308] [312]	Press 7 OFF			
	Disable Auto Scroll Open Zones	[861-876] [022]	Press 8 OFF	Page 15		
	Disable Power LED on Keypad	[861-876] [022]	Press 5 or 6 OFF			
	Change "Chimes" by Zone	[861-876]	[101 - 228] (4 chime toggle options)			
	Keypad Partition Assignment	[861-876] [000]	Enter: 00 for Global, 01 for Partition 1 02 for Partition 2, etc.			
	009 Area	048 Den	067 Exit	106 Laundry	139 Patio	170 Sliding
	017 Back	050 Detector	071 Family	107 Left	145 Pool	171 Smoke
	020 Bathroom	051 Dining	081 Front	112 Living	152 Rear	172 Son's
	022 Bedroom	053 Door	084 Garage	123 Monoxide	156 Right	176 Stairs
	023 Bonus	054 Down	086 Glass	118 Master	157 Room	189 Unit
	034 Carbon	056 Downstairs	089 Hallway	125 Motion	163 Sensor	190 Up
	045 Daughter's	064 Entry	104 Kitchen	132 Office	168 Side	192 Window